

Series I Trap Cleaning

1. Using Grill Removal Key (supplied), remove grill & set aside carefully on a flat surface - Fig A
2. Remove trap guard & set aside - Fig B
3. Rotate valve anti-clockwise - Fig C
4. Carefully remove valve from trap body - Fig D
5. Wash valve under clean running water until any residue has been removed - Fig E
6. Carefully replace valve & lock back into position by rotating clockwise.
7. Replace trap guard & grill - Fig F

Fig A



Fig B

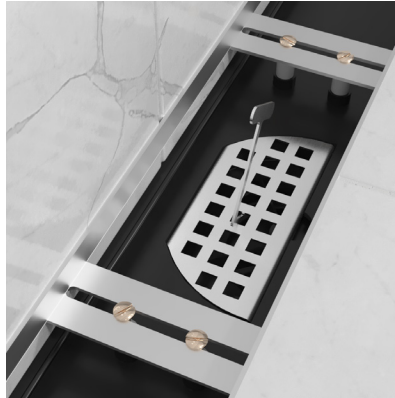


Fig C



Fig D



Fig E



Fig F

